

MEGA^{LITE}

PRO
COLOR
cannon



USER MANUAL

Table of Contents

Safety Information.....	3
Specifications.....	4
Main Power Connection.....	5
DMX-512 Connection.....	5
DMX Profile.....	6
Main Control Menu.....	7
Rigging the Fixture.....	9
Cleaning & Maintenance.....	9
Parts List.....	9

Check that the unit has not been damaged during transport



**Read all cautions and warnings
prior to operation of this
equipment**

Protection Against Fire



Fire

1. Maintain a minimum of 1 foot distance from any type of flame.
3. Replace fuse only with the specified type and rating.
4. Do Not install the unit too close to a heat source.
5. Make sure cables are properly secured away from unit movement.
6. Maximum surface operating temperature 80°.

Protection Against Fire



Electrical

1. Disconnect power before servicing.
2. For connection to main power supply proceed to page 5.
3. This unit must be earthed. (electronically grounded)
4. Do not expose unit to rain or moisture.

Protection Against Mechanical Hazards



Mechanical

1. Use safety chain when hanging unit.
2. Use quality clamps or bolts when positioning unit.
3. Do not open unit while it is on, risk of electrical shock.

Technical Information



Catalog Logic

3000	RGB	30	-xx
Housing	LED Module	Lens Module	Options
3000- Pro Color Cannon Black Housing 3001- Pro Color Cannon White Housing	TRGB- Tri Colored RGB TWWA- Tri Colored WWA RGB- 3 Watt Red, Green, Blue WWA- 3 Watt White, White, Amber	15- 15° Lens Kit 30- 30° Lens Kit 60- 60° Lens Kit	BD- Barn Door GH- Gel Holder

Mechanical Specifications

DMX Connectors:	3-pin & 5 Pin XLR connectors
Power Connection:	Neutrik Power Con in/Out
Thermal:	Maximum ambient temperature 40° C Maximum surface temperature 60° C
Fastening System:	Double Mounting Yoke & Security Eye bolt
Accessories:	1 / Edison power head to Blue Power Con cable (included) 1 / White Power Con head (included)

Fixture	Packaged for Shipping
Size: 9.50x 8.750x 11.250 Weight: 6 lb	Size: 140x 100x 11.50 Weight: 7.5 lbs



Electrical Specifications

LED Quantity:	36	Power Consumption:	110V-220V50/60 Hz
LED Type (Options) :	Tri Colored RGB Tri Colored WWA Red, Green, Blue White, White, Amber	Ballast:	Electronic
LED Watts:	3	Watts:	71
LED Lifetime:	60 to 100 thousand hours	Amps:	.91
LED Angle (Options):	15° (± 5°) 30° (± 5°) 60° (± 5°)		

Control & Programming

Protocol: DMX 512

DMX Channels:	Mode A	3 Channels	R,G,B
	Mode P	4 Channels	Dimmer/Strobe, R,G,B
	Mode F	6 Channels	R ,G ,B, Strobe, Macro , Dimmer

Control options: Audio-trigger

Main Power Connection

Caution!


- 1. Do not connect fixture to a dimmer system.
- 2. This unit has Auto switching power supply. It will respond to 110V or 220V automatically
- 3. This unit must be earthed. (electronically grounded)
- 4. Replace fuse only with the specified type and rating.

The occupation of the connection-cable is as follows:


This fixture is equipped with an electronic power supply that will let the unit operate from 90V to 240V from 50Hz to 60Hz

Cable [USA]	Cable [EU]	Pin	110V	220V
Black	Brown	Live	L	L
White	Light Blue	Neutral	N	L
Green	Yellow/Green	Ground		

110V
Connection

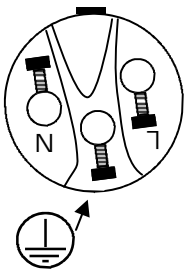


220V
Connection

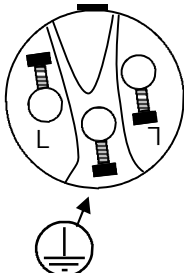

DMX-512 Connection


The fixture is equipped with 3 pin and 5 pin XLR Sockets for DMX input and output. The sockets are wired in parallel. Only use a shielded twisted pair cable designed for RS-485 and 3 pin XLR plugs and connectors in order to connect the controller with the fixture or the fixture with another.

DMX—input

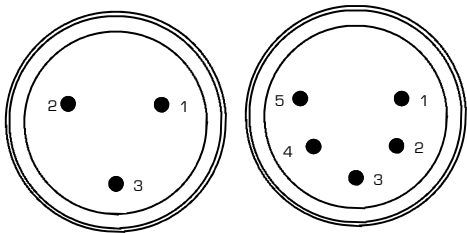

DMX—output

1. Shield
2. Signal [-]
3. Signal [+]

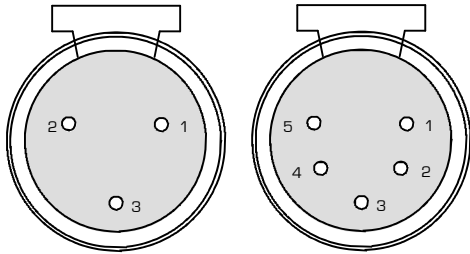

Caution!

At the last fixture the DMX signal needs to be terminated with a terminator. Solder a 120 Ohm resistor between the [-] and the [+] signal into a 3 pin XLR plug and plug it in to the last fixture on the signal run. Pre-manufactured terminator plugs are available for purchase from your Mega-Lite dealer (HOS-DMXT).

Pro Color Cannon Mode A

DMX Chanel	Function	Description	Value
1	LED Color	Red LED intensity	0-255
2	LED Color	Green LED Intensity	0-255
3	LED Color	Blue LED Intensity	0-255

Pro Color Cannon Mode P

DMX Chanel	Function	Description	Value
1	Dimmer	Dimmer	0-152
		Strobe (slow to fast)	153-242
		Dimmer Full On	243-255
2	LED Color	Red LED intensity	0-255
3	LED Color	Green LED Intensity	0-255
4	LED Color	Blue LED Intensity	0-255

Pro Color Cannon Mode F

DMX Chanel	Function	Description	Value
1	LED Color	Red LED intensity	0-255
2	LED Color	Green LED Intensity	0-255
3	LED Color	Blue LED Intensity	0-255
4	Strobe	Strobe (slow to fast)	0-255
5	Macro	No Function	0-1
		Color fade (slow to fast)	2-19
		Color Snap (slow to fast)	20-39
		Random (slow to fast)	40-59
		Yellow	60-79
		Purple	80-99
		Aqua	100-119
		Orange	120-139
		Red Pulse	140-159
		green Pulse	160-179
		Blue Pulse	180-199
		Yellow Pulse	200-219
		Aqua Pulse	220-229
		White Pulse	230-249
		White LED Full	250-255
6	Dimmer	Dimmer Off to Full	0-255

Main Control Menu

The control board on the fixture base is your interface to access and control all the functions on the unit. Its digital display gives you a code view of the options and functions. The following will explain each function and its options.

CONTROL BOARD



Menu Up Down Enter

DMX Address	Red Dimmer	Green Dimmer	Blue Dimmer	Flash	Fade Scroll	Flash Scroll	Chase Effect	Chase Speed	Sound Chase	Sound Flash	Sound Sensor
Addr	RL--	GL--	BL--	FLAS	FADE	ASC-	CE--	CS--	SouA	SouF	SEnS
1-512	0-15	0-15	0-15	0-15	0-15	0-15	0-15	0-15	Loop	Loop	0-15

ADDR |

DMX Address

Press **Enter** to select the mode of operation.

ADDR |

Mode **A** (3 Channels) R,G,B

PADDR |

Mode **P** (4 Channels) Dimmer/ Strobe, R,G,B

FADDR |

Mode **F** (6 Channels) R,G,B, Strobe, Macro, Dimmer

Use the **up/down** keys to select the required DMX start channel.

RL--

Red Dimmer

This function allows you to dim the red LED's on the whole strip. Press **Enter** use the **up/down** keys to select desired dimmer settings. Press **Enter** to confirm the settings.

GL--

Green Dimmer

This function allows you to dim the green LED's on the whole strip. Press **Enter** use the **up/down** keys to select desired dimmer settings. Press **Enter** to confirm the settings.

BL--

Blue Dimmer

This function allows you to dim the blue LED's on the whole strip. Press **Enter** use the **up/down** keys to select desired dimmer settings. Press **Enter** to confirm the settings.

FLAS

Flash

This function allows you to strobe the LED's on the whole strip in White color. Press **Enter** use the **up/down** keys to select desired flash settings. Press **Enter** to confirm the settings.

F A D E **Fade Scroll**

This function allows you to fade the LED's on the whole strip from one color to another. Press **Enter** use the **up/down** keys to select desired fade speed settings. Press **Enter** to confirm the settings.

A S C - **Flash Scroll**

This function allows you to change the LED's on the whole strip from one color to another. Press **Enter** use the **up/down** keys to select desired color change speed settings. Press **Enter** to confirm the settings.

C E - - **Chase Effect**

This function allows you to select different chase patterns on the whole strip. Press **Enter** use the **up/down** keys to select desired chase settings. Press **Enter** to confirm the settings.

C S - - **Chase Speed**

This function allows you to select the speed of the chase that was selected on the Chase function . Press **Enter** use the **up/down** keys to select desired chase speed settings. Press **Enter** to confirm the settings.

S O U A **Sound Chase**

This function allows you to select the chase pattern that will be triggered via audio. Press **Enter** use the **up/down** keys to select desired Chase settings. Press **Enter** to confirm the settings.

S O U F **Sound Flash**

This function allows you to select the flash pattern that will triggered via audio. Press **Enter** use the **up/down** keys to select desired dimmer settings. Press **Enter** to confirm the settings.

S E N S **Sound Sensor**

This function allows you to select the sensitivity of the audio sensor. Press **Enter** use the **up/down** keys to select desired dimmer settings. Press **Enter** to confirm the settings.

Rigging the fixture

Caution!

1. The installations must be carried out by an authorized dealer or trained professional.
2. Unit may cause severe injuries if you have doubts concerning the safety do not install.
3. Unit is to be 24 inches away from flammable materials (decoration material)
4. Use high quality installation equipment to hang unit.

When rigging a unit it is very important that you follow common safety procedures. Rigging requires extensive experience including but not limited to calculating working loads, material being used and periodic safety inspections. If you lack these qualifications, do not attempt the installation yourself, instead use a professional structural rigger.

When rigging the unit always be secured with a secondary safety attachment. The installation location of the projector has got to be built in the way that it can hold 10 times the weight for 1 hour without any harming. Installation should be checked at least one time a year by a skilled person.

Cleaning and maintenance

Installation Maintenance: The operator has to make sure that the unit is operating safely and has the installations and electronics checked by an expert every 2 years.

The following points have to be considered during the inspection:

- 1) All screws used for installing the device or part of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on the housing, fixation and installation spots (ceiling, suspension, trussing).
- 3) The electronic power supply cables must not show any damages, material fatigue (e.g. porous cables) or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.

Note: There is no serviceable parts inside the device except for the LED's. Maintenance and service operations are to be carried out by authorized dealers.


Replacing the fuse: Only replace the fuse with the same type and rating.

Replacing the power cable: If the power cable of this device becomes damaged, it has to be replaced by authorized dealers or trained professional only.

Should you have further questions , please contact your dealer.

Parts List

9056	Quad Cannon Road Case
3000-pcb	Main PCB card
3000-ps	Power Supply
4000-dis	Display
4000-fh	Fuse Holder

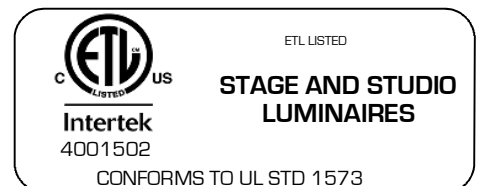

Warranty Information

Limited Warranty

Unless otherwise stated, your product is covered by a one year parts and labor limited warranty. Dichroic filters and glass gobos are not guaranteed against breakage or scratches to coating. It is the owner's responsibility to furnish receipts or invoices for verification of purchase, date, and dealer or distributor. If purchase date cannot be provided, date of manufacture will be used to determine warranty period.

Returning an Item Under Warranty for Repair

It is necessary to obtain a Return Material Authorization (RMA) number from your dealer or point of purchase BEFORE any units are returned for repair. The manufacturer will make the final determination as to whether or not the unit is covered by warranty. Lamps are covered by the lamp manufacturer's warranty.

Any Product unit or parts returned to MEGA Systems Inc. must be packaged in a suitable manner to ensure the protection of such Product unit or parts, and such package shall be clearly and prominently marked to indicate that the package contains returned Product units or parts and with an RMA number. Accompany all returned Product units or parts with a written explanation of the alleged problem or malfunction. Ship returned Product units or parts to: 5711 Kenwick St. San Antonio TX 78254 USA.

Note: Freight Damage Claims are invalid for fixtures shipped in non-factory boxes and packing materials.

Freight

All shipping will be paid by the purchaser. Items under warranty shall have return shipping paid by the manufacturer only in the Continental United States. Under no circumstances will freight collect shipments be accepted. Prepaid shipping does not include rush expediting such as air freight. Air freight can be sent customer collect in the Continental United States.

REPAIR OR REPLACEMENT AS PROVIDED FOR UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. MEGA SYSTEMS INC. MAKES NO WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO ANY PRODUCT, AND MEGA SYSTEMS SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. MEGA SYSTEMS SHALL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGE, INCLUDING LOST PROFITS, SUSTAINED OR INCURRED IN CONNECTION WITH ANY PRODUCT OR CAUSED BY PRODUCT DEFECTS OR THE PARTIAL OR TOTAL FAILURE OF ANY PRODUCT REGARDLESS OF THE FORM OF ACTION, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, AND WHETHER OR NOT SUCH DAMAGE WAS FORESEEN OR UNFORESEEN. Warranty is void if the product is misused, damaged, modified in any way, or for unauthorized repairs or parts. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Mega-Lite
5718 Kenwick St
San Antonio, TX 78238
Ph 210-684-2600 Fax 210-855-6279
www.mega-lite.com / info@mega-lite.com